



## Generic noise criterion curves for sensitive equipment

M. L Gendreau

Colin Gordon & Associates, P. O. Box 39, San Bruno, CA 94066, USA  
michael.gendreau@colingordon.com

Electron beam-based instruments are sensitive to the environment in which they operate. Adverse environments may limit their achievable resolution. Many equipment manufacturers provide specifications for the acceptable level of various environmental conditions, such as vibration, EMI, and acoustic noise. However, the quality of the specifications vary significantly, from well-defined to conjectural. Additionally, during the design of a facility, the specific instruments that will be used may not yet be known. Thus, it is useful to have “generic” criteria, intended to represent entire classes of instruments, to use in the design of facilities. Generic vibration criteria exist to aid in the design of laboratories, though there are no such instrument-based generic criteria available for acoustic noise. The generic noise criteria that are currently used in lab design (NC, NR, dBA, etc.) were established to address the effects of noise on human beings.

Using noise specifications for a significant number of instruments with varying resolving powers, correlation of resolution with environmental noise is demonstrated. Based on the data reviewed, generic noise criterion curves have been developed and presented for use in the design of facilities that contain noise-sensitive equipment. These are applicable when other well-defined and specific criteria are not available.

## 1 History and impetus

Because of the often random (but statistically stationary) nature [1] of environmental phenomena that influence the reliability and accuracy of processes sensitive to them, and of uncertainty in the determination of limits in metrological work (and especially the limited specificity of human perception when it is a factor), it is common to use so-called “generic” criteria to represent or delimit groups of varying members. In addition to simplifying the representation of data, such methods may be used to represent information that is not presently known or not knowable, such as the vibration sensitivity of an undeveloped metrology tool, but for which limits must necessarily be set in order to carry out the design of the building that will support it.

The present essay regards the development of generic acoustic noise criteria for noise-sensitive equipment (or “tools”), such as those used in physics and nanotechnology research, semiconductor production, etc. By way of analogy it is useful to consider the development and current adaptation of the generic “vibration criterion” (VC) curves commonly used in the identified industries to design and rate the environmental vibration performance of the floors upon which such work is carried out [2, 3]. They were developed by collecting and sorting the tested vibration sensitivity frequency response spectra of various types of tools, which necessarily are relatively complex and varying as a function of their various internal structural designs [4].

In fact, the use of generic curves for rating and designing rooms for acoustic noise is as varied and common as those used for vibration, and perhaps more so. The primary difference is that the many types of noise rating curves available (NC, NR, RC, etc.) were developed with respect to human perception rather than instrument sensitivity (although there are vibration curves for the former purpose, and even the VC curves are related to a set of higher-amplitude perceptivity curves). Unlike vibration, to which instruments and people are primarily sensitive in the same range (approximately 1 to 100 Hz), noise impact on people and instruments occurs in different (but overlapping) frequency ranges. People are primarily sensitive in the mid-to high-audio frequency range (approximately 100 to 10,000 Hz), whereas instrumentation is primarily (with exceptions) sensitive in the 100 to 1000 Hz range, and

sometimes lower into the infrasonic range (100 to 10 Hz and below) depending, for example, on the presence of exposed beams sensitive to air pressure fluctuations. Thus, while it is currently common to use perception-based curves such as NC or NR to design and evaluate rooms for tools and instrumentation (in addition to their designation for humans), they may not well represent the general shape of the curves actually required for groups of tools or specific tools, which would influence the cost, practicality, and effectiveness of the design. That is, the use of curves designed for humans might produce over- or under-designed rooms for instruments, at certain frequencies [5].

## 2 The current state of available noise specifications for tools

One of the primary reasons for developing generic noise criteria for tools is that the accuracy and reliability of the sensitivity data for individual tools varies widely. For example, a survey of the available data on a particular type of instrument known to have sensitivity to noise in many cases, such as transmission or scanning electron microscopes (TEM and SEM), would produce instruments for which tested, reliable, and detailed noise sensitivity data exists; others for which the noise sensitivity has only been estimated; and others for which the specific sensitivity is unknown, except perhaps by anecdotal evidence such as “nearby talking causes interference.” It is difficult to make reasonably accurate assumptions about the actual sensitivity of the latter instruments, given that the detailed test data available for other similar instruments may show significant variation in sensitivity from instrument to instrument. One of the goals in the development of generic sensitivity curves is that unknown tools may also be represented by a curve drawn through the points of maximum sensitivity of known tools of the same class and operational resolution. This goal is achievable given the assumption that the requirements of unknown tools would likely fall within the range of variation for the group of tools for which we have good data.

## 3 Format of generic tool noise criterion curves

The formats of the available test data vary significantly [5]. The format of generic tool noise criterion curves (hereafter

abbreviated “NCT”) must be developed from practical considerations:

- They will be expressed in logarithmic units of sound pressure (dB re 20 micropascals), which is the most common and most easily measured index for noise.
- They will be expressed as frequency spectra, with a resolution of octave bands of frequency. (Higher resolutions are always preferable, and reducible to octave bandwidths when necessary.)
- There will be no frequency weighting based on human perceptual indices.
- The practical frequency range, from the standpoint of available information on noise-producing equipment and noise control materials, is 63 Hz to 8000 Hz. However, it will be necessary in some cases to consider lower frequencies, as discussed below. It will be preferred therefore, that the first-order curves rate noise within this range, and that there be contingent extension of the curves to lower frequencies when needed. That is, it is expected that there may be a variance in curve shape for tools with and without significant sensitivity to infrasound. Because of the lack of acoustical design data below 63 Hz, it will be understood that design for this region requires special considerations.
- There is a practical lower limit in amplitude, as a function of frequency, in terms of achievability, and of measurability using commercially available equipment. Beyond this limit (and preferably even approaching this limit), manufacturers will have to provide tools less sensitive to acoustic noise by innovation and good engineering practice.

#### 4 Development of curves by comparison with tool specifications

When it is not possible to obtain tool sensitivity test reports thorough enough to contain a description of the test details and error analysis, as is unfortunately most often the situation, we must make assumptions about the specifications presented in tool manufacturer’s installation manuals. It is somewhat conjectural to state that believable tool noise sensitivity spectra have certain characteristics, such as a “jagged” shape implying the expected: sensitivity at certain discreet frequencies, but this is often the case. It is also possible that some manufacturers have chosen to simplify such response functions by identifying a straight line that asymptotes to one or more minimum values in the actual performance curve (indeed, a similar method is proposed in this essay). The present analysis is based on sensitivity spectra that are known (or at least appear) to represent measured frequency response functions. Non-rigorous specifications may then be compared for consistency to the generic curves developed (e.g., by converting them to dBA, dBC, NC, etc. as necessary)—this is relevant since some tool manufacturers grant warranty on this basis, despite the lack of definition.

### 5 Comparison of typical tool noise specifications with sensitivity curves based on human perception

Although there are many types of noise-sensitive tools, including interferometers, atomic force microscopes and other probe devices, this study focuses on SEMs, TEMs, and STEMs (scanning transmission electron microscopes) since for these instruments we found noise sensitivity data for the greatest variety of makes, models, and resolutions. Figures 1 and 2 show all of the data collected for these instruments, of various makes and resolutions, in comparison with the commonly-used NR curves.

Reviewing the data, it is clear that this collection of frequency spectra do not follow the NR (or the similar NC) curve shape. Instead, especially obvious in the SEM data (Figure 1), there is a range of constant sound pressure, from about 250 Hz up (around 50 dB, with one exception). Perhaps this should not be surprising, given that the related vibration criterion (VC) curves fall out as lines of constant velocity above a certain frequency, and the function that relates radiated sound pressure to vibration in a panel is proportional to velocity.

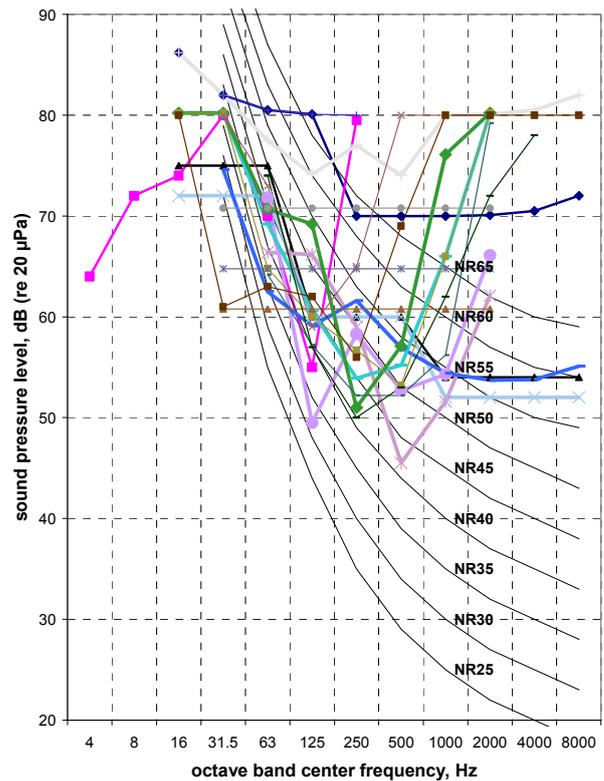


Fig.1 Manufacturer’s noise specifications (reduced to octave bands when necessary) for 19 SEMs.

Also, one wonders if the criteria for the few tools that represent a constant (or, in one case of one TEM, downward-sloping) amplitude sensitivity above 1000 Hz are realistic. Most of the tools become less sensitive above 500 or 1000 Hz, and this is consistent with our understanding of the likelihood of noise-induced vibration in machinery at high frequencies [5].

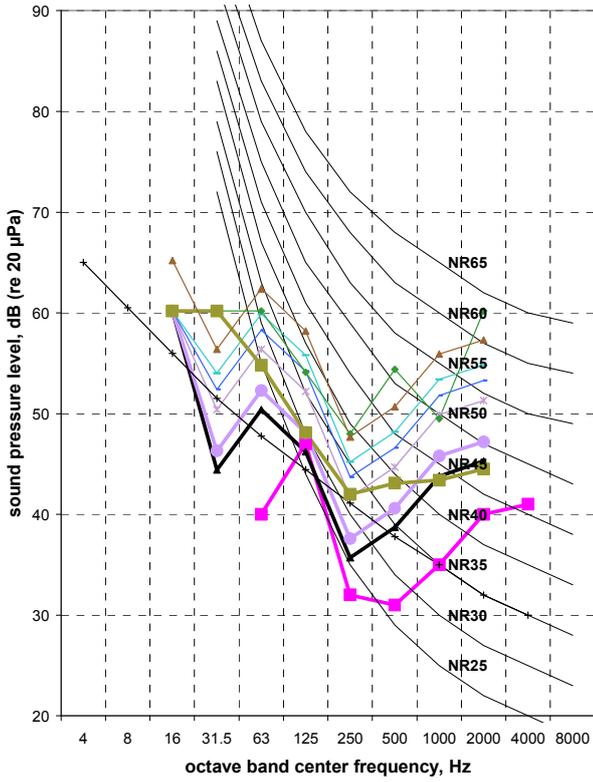


Fig.2 Manufacturer's noise specifications (reduced to octave bands when necessary) for 7 TEMs and 4 STEMs (bolder lines).

## 6 Tool sensitivity versus resolution and magnification

Experience and intuition imply that a tool's operating resolution or magnification is a function of the tool's sensitivity to various environmental factors. But it also depends on other factors, such as the design of the tool structure, the presence of engineering details to reduce sensitivity (such as enclosures), etc. [6]. Thus while we may expect a general trend in sensitivity to noise versus resolution, we will expect some spread in the data.

To examine this relationship, it is necessary to reduce each of the noise spectra to a single value for comparison with the corresponding single value for resolution or magnification. Several means were tested. These included using the A-weighted overall sound level; the lowest noise level in the octave band and original one-third octave band spectrum ( $MIN_{OB}$  or  $MIN_{OB/3}$ ); and the "inverse summed" value for all of the octave bands and original one-third octave bands ( $\Sigma_{OB}$  or  $\Sigma_{OB/3}$ ), i.e.,

$$\Sigma_{OB,OB/3} = -10 \log \left( 10^{-x_1/10} + 10^{-x_2/10} + 10^{-x_3/10} + \dots \right) \quad (1)$$

where  $x_1, x_2, x_3$ , etc., are the various octave band or one-third octave band amplitudes. The best fit linear regressions between noise sensitivity and resolution, determined by the correlation coefficient squared value ( $R^2$ ), were found using the  $\Sigma_{OB/3}$  or  $MIN_{OB/3}$  value.

For example, Figure 3 plots the maximum rated resolution of several SEMs versus noise sensitivity. The trend shows a general correlation, but not good correlation. The fit to the data from SEMs of one manufacturer is much better, as shown in Figure 4. Perhaps this is to be expected, as these SEMs probably have been designed using similar internal structural design concepts.

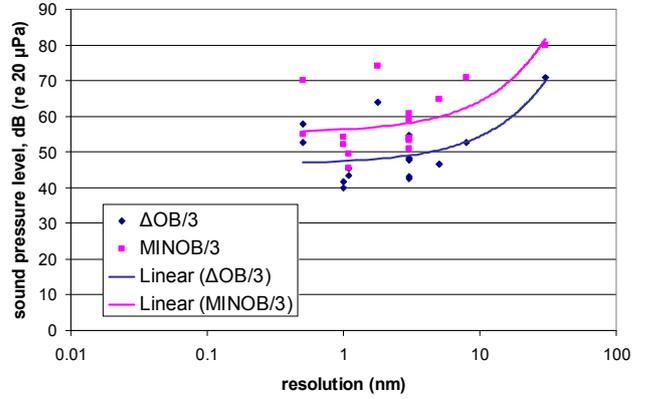


Fig.3 Representative noise sensitivity of several SEMs versus maximum rated resolution (various manufacturers and models).

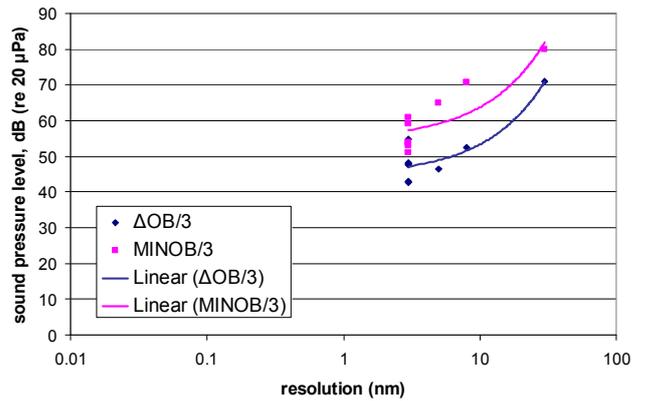


Fig.4 Representative noise sensitivity of several SEMs versus maximum rated resolution (one manufacturer, various models).

Similar plots for various TEMs and STEMs are shown in Figures 5 and 6. In these cases, the populations are much more limited, but there is better correlation, at least in part because fewer manufacturers are represented.

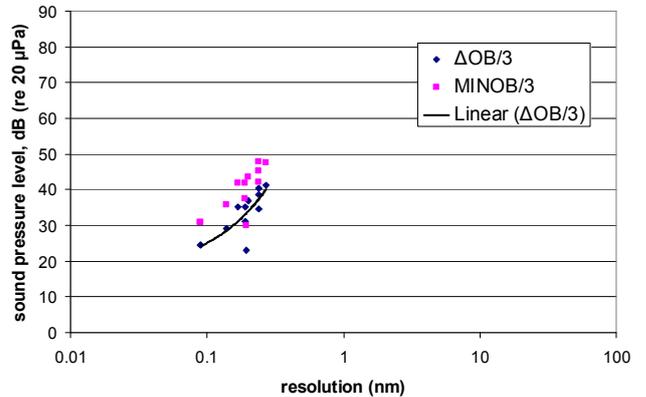


Fig.5 Representative noise sensitivity of several TEMs versus maximum rated resolution (various manufacturers and models).

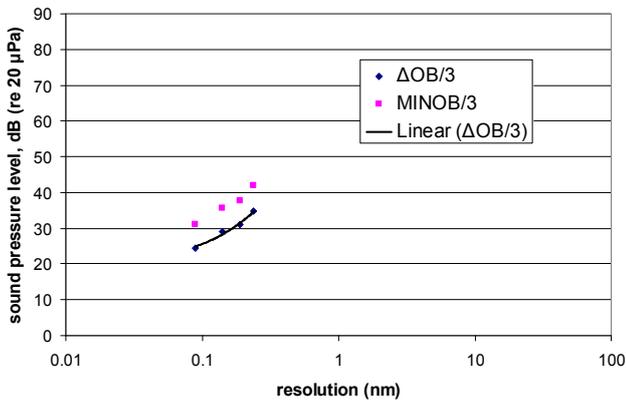


Fig.6 Representative noise sensitivity of several STEMs versus maximum rated resolution (one manufacturer, various models).

The manufacturer's data for the TEMs examined also typically contained maximum magnification specifications, and Figure 7 compares these with the representative noise levels. In this case, there is very good correlation between noise and maximum magnification.

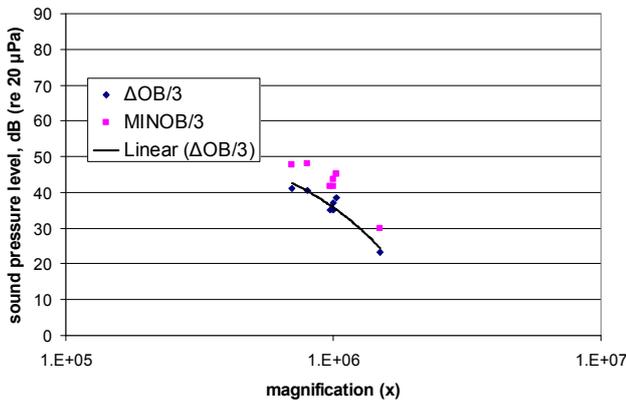


Fig.7 Representative noise sensitivity of several TEMs versus maximum rated magnification (various manufacturers and models).

## 7 Generic noise criterion curves for tools

The lower bound of the data shown in Figures 1 and 2 describe potential shapes for generic noise criterion curves for tools, and the data in Figures 3 through 6 imply that a family of curves might be identified, as a function of achievable resolution.

Figure 8 summarizes all of the data in Figures 1 and 2 taking the lower boundary of the data for various resolutions. The divisions between selected resolutions are arbitrary, defined where there appeared to be a significant separation in the amplitude of the data points. The resolutions of the SEMs for which we have data varies between 0.5 and 30nm, and the STEMs and TEMs vary from 0.09 to 0.024 and 0.027nm, respectively.

To conclude this exercise, Figures 8 and 9 overlay generic curves suggested by these data, as a function of achievable resolution. The curves are shown in solid in the 63 to 2000 Hz range, and dashed in the infrasonic range below 63 Hz. This is to emphasize that design of spaces to support tools sensitive in the infrasonic range will be difficult due to the general lack of acoustical design data for the lower frequencies, as discussed above. These requirements should be taken no less seriously, however. Table 1 tabulates the generic curve values shown.

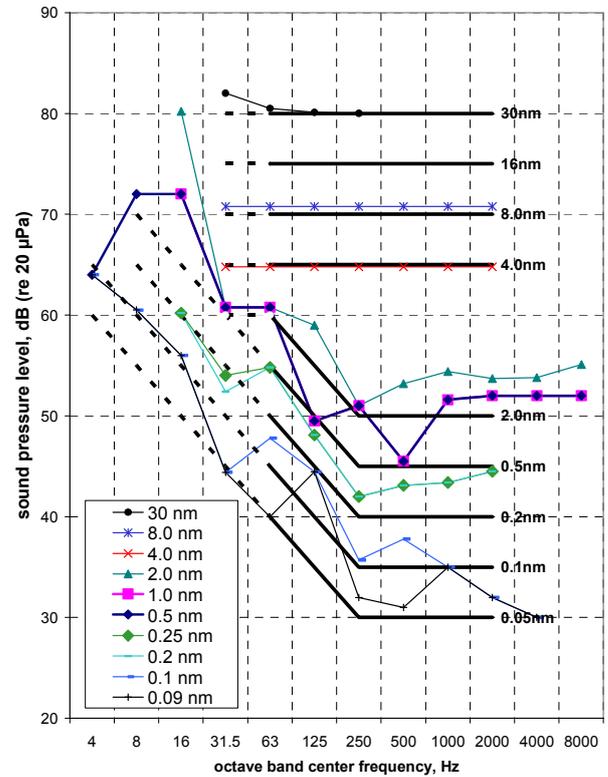


Fig.8 Lower boundaries of all data for various resolutions and generic noise criterion curves developed from the data analyzed.

The recommended curves subtend all but a few outlying data points. Thus, they are generally conservative since they represent the most sensitive tools known for the resolutions given. In any case, when possible, reference to actual tested tool noise requirements is recommended (especially in the case of infrasonic requirements), when these are available.

## 8 Conclusions

High-resolution instruments such as SEMs and TEMs are sensitive to acoustic noise to varying degrees. Although there are other factors, there is a general relationship between achievable resolution and the environmental noise level. The general practice in lab design, when the specific requirements of the tools are unknown, as is often the case, is to use standardized perception-based criteria developed for human occupancy, such as the family of NC or NR curves. However, it has been shown that the frequency response of tools, in general, does not follow the shape of these curves in certain respects. The implication is that the use of NR or NC curves in laboratory design might provide

inadequate noise control at low frequencies (<500 Hz) and excessive noise control at higher frequencies, in consideration of the tools only (for laboratories also containing human occupants consideration of the relatively stringent requirements of the NC or NR curves for higher frequencies is also recommended).

Based on compiled noise sensitivity and resolution data for a significant quantity of various types of electron microscopes, generic tool noise criterion curves have been developed for use in the design of laboratories in cases where the specific future tool requirements are unknown, or where there is a desire to provide flexibility in the design to support a number of potential tools.

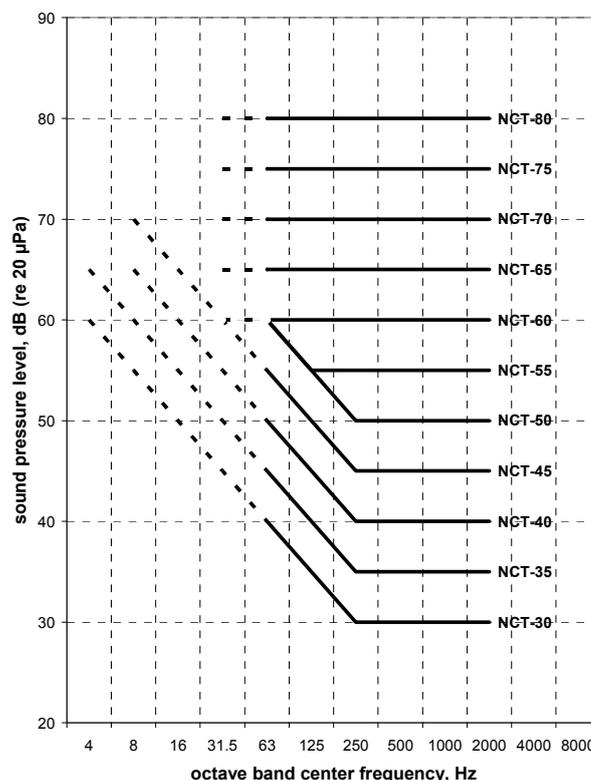


Fig.9 Generic noise criterion curves developed from the data analyzed.

NCT	Instrument Resolution nm	Sound Pressure Level (dB re20 uPa) versus Octave Band Center Frequency (Hz)									
		4	8	16	31.5	63	125	250	500	1000	2000
NCT-80	30				80	80	80	80	80	80	80
NCT-75	16				75	75	75	75	75	75	75
NCT-70	8				70	70	70	70	70	70	70
NCT-65	4				65	65	65	65	65	65	65
NCT-60					60	60	60	60	60	60	60
NCT-55					60	60	55	55	55	55	55
NCT-50	2				60	60	55	50	50	50	50
NCT-45	0.5		70	65	60	55	50	45	45	45	45
NCT-40	0.2		65	60	55	50	45	40	40	40	40
NCT-35	0.1	65	60	55	50	45	40	35	35	35	35
NCT-30	0.05	60	55	50	45	40	35	30	30	30	30

Table 1 Numerical values for tool noise criterion curves (NCT) shown in Figure 9

## References

- [1] J. S. Bendat, A. G. Piersol, *Random Data: Analysis and Measurement Procedures* (1989)
- [2] E. E. Ungar, C. G. Gordon, "Vibration Challenges in Microelectronics Manufacturing", *Shock and Vibration Bulletin*, 53(1):51-58 (1983)
- [3] Institute of Environmental Sciences (IEST), "Considerations in Clean Room Design", *Institute of Environmental Sciences*, IES-RP-CC012.2 (2005)
- [4] As discussed elsewhere, for example M. L. Gendreau, H. Amick, "Chapter 39 Micro-Vibration and Noise Design", *Semiconductor Manufacturing Handbook* (2005), the frequency response sensitivity curves for equipment tend to be complex, with frequencies of maximum sensitivity corresponding to internal structural resonances.
- [5] M. L. Gendreau, "(Specification of the) Effects of Acoustic Noise on Optical Equipment", *Proceedings of SPIE* Vol. 3786 (1999), reprinted and updated in *Noise and Vibration Worldwide* Vol. 32,(4), (2001).
- [6] For example, in one case examined, three models of the same tool are differentiated only by the sample size handled (and thus, different stage and chamber size). In this case, for the same rated resolution, the tool is stated to be increasingly more sensitive to noise with increasing ability to handle larger sample sizes.